



Remote Control - R100

NO	FAQ	PAGE
1	Important notes before using the RC100	2
2	How to reset the essential sensors (for ANT & BRI Series)	3
3	Fast setup steps and usage warnings	4





Read Before Use RC100

Before Use

1. Insert two AAA batteries into RC100.

What Not to Do

1. Do not allow regular staff to use RC100.
Unintended presses may change settings.

Usage Notes

1. Aim RC100 directly at the motion sensor when send settings.
Stand close for best results.
2. Signal may be blocked by walls, metal, or electronic devices.
3. Store indoors in a dry, clean place.
Avoid sunlight, heat, and moisture.

Key Button Functions

ON/OFF: Disable motion sensor; switch to manual mode.

AUTO: Enable motion sensor mode

DISP: Display current settings.

DISP + SEND: Show and send current settings to the fixture.

Reset (press once) + ON/OFF (press twice): Factory reset.





How to reset the essential sensors (for ANT & BRI Series)



1. Show Current Setting

Press **DISP** to view current settings on the R100.

2. Change Current Settings

Use     to locate and adjust. Press **OK** to confirm.

3. Check the Updated Settings

Press **DISP** again to review changes.

4. Send the Updated Settings to the Fixture

Point at the light, press **Reset**, then **SEND**.

5. Confirm Update

The light will flicker to show it received the new settings.



QUICK SETTING

Press MODE 1, MODE 2, MODE 3, or MODE 4 on the RC100.

Aim at the sensor and press **SEND**.

The light will flicker to confirm a successful setting.

CAUTION

If you pressed **ON/OFF**,
press **AUTO** while pointing at the sensor
to turn motion sensor mode back on.
The light will flicker when it's reactivated.