



Remote Control: RC-100



NO	FAQ	PAGE
1	Important notes before using the RC-100	2
2	How to reset the essential sensors (for ANT & BRI Series)	3
3	Fast setup steps and usage warnings	4



Read Before Use RC-100

Before Use

1. Insert two AAA batteries into RC-100.

What Not to Do

1. Do not allow regular staff to use RC-100.
Unintended presses may change settings.

Usage Notes

1. Aim RC-100 directly at the motion sensor when send settings.
Stand close for best results.
2. Signal may be blocked by walls, metal, or electronic devices.
3. Store indoors in a dry, clean place.
Avoid sunlight, heat, and moisture.

Key Button Functions

ON/OFF: Disable motion sensor; switch to manual mode.

AUTO: Enable motion sensor mode

DISP: Display current settings.

DISP + SEND: Show and send current settings to the fixture.

Reset (press once) + ON/OFF (press twice): Factory reset.





How to reset the essential sensors (for ANT & BRI Series)



1. Show Current Setting

Press **DISP** to view current settings on the RC-100.

2. Change Current Settings

Use     to locate and adjust. Press **OK** to confirm.

3. Check the Updated Settings

Press **DISP** again to review changes.

4. Send the Updated Settings to the Fixture

Point at the light, press **Reset**, then **SEND**.

5. Confirm Update

The light will flicker to show it received the new settings.



QUICK SETTING

Press MODE 1, MODE 2, MODE 3, or MODE 4 on the RC-100.

Aim at the sensor and press **SEND**.

The light will flicker to confirm a successful setting.

CAUTION

If you pressed **ON/OFF**,
press **AUTO** while pointing at the sensor
to turn motion sensor mode back on.
The light will flicker when it's reactivated.